



PRORXD-1RU Quick Start Guide

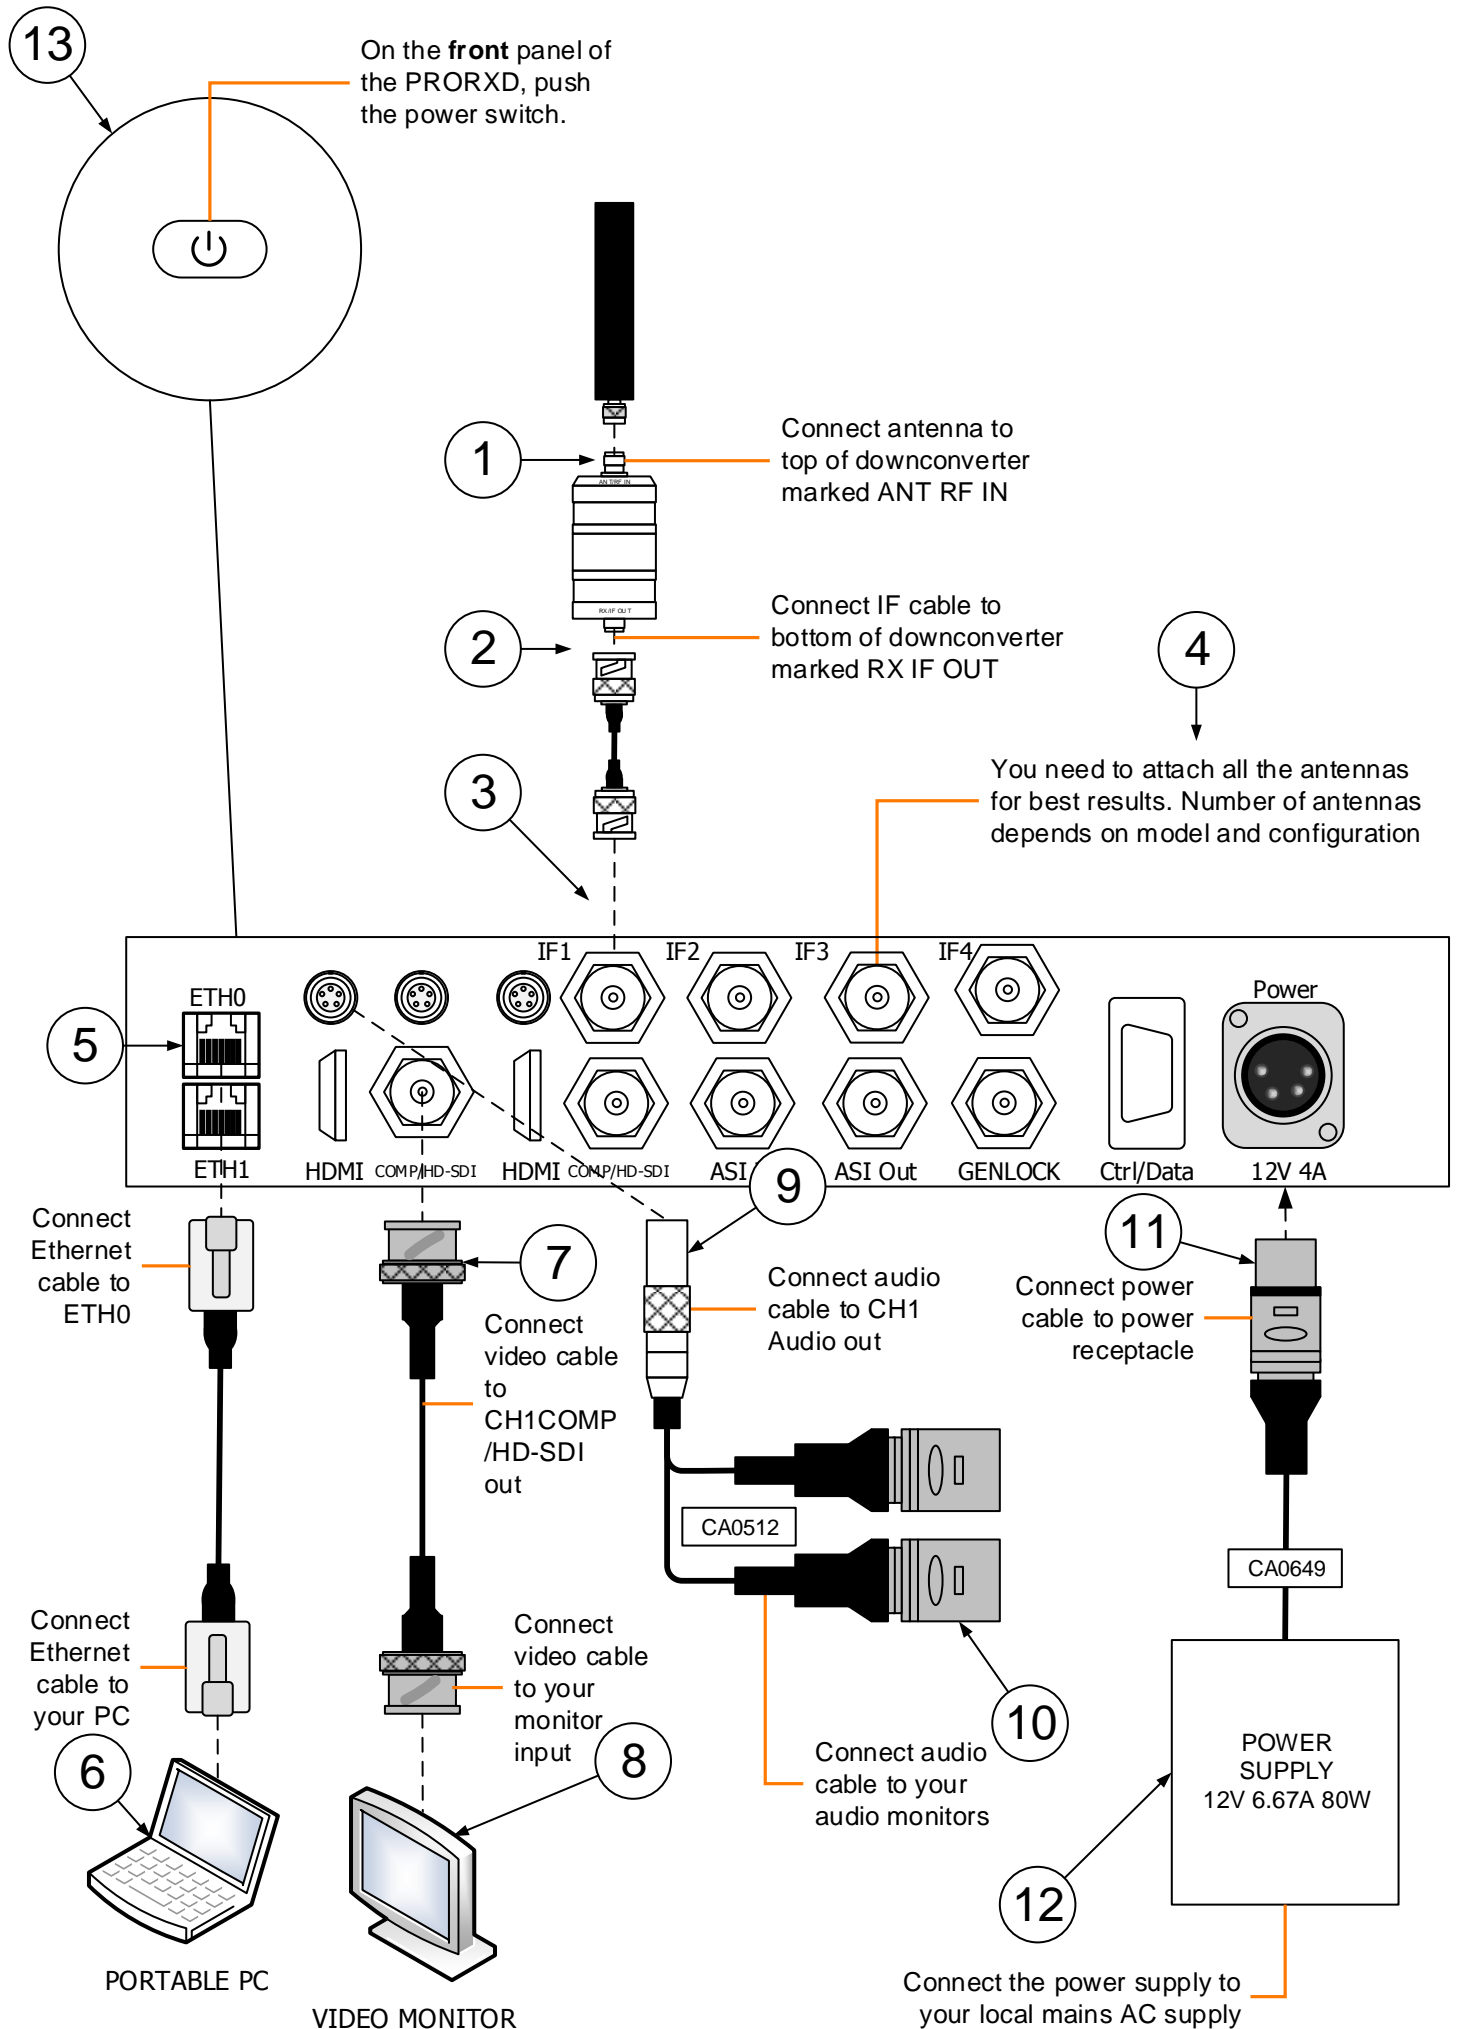

Type IP address for your PRORXD*

On your PC, open your web browser

* Power on the PRORXD, rotate the Joystick to the left through eight pages until you see the IP address, subnet mask and Gateway address.

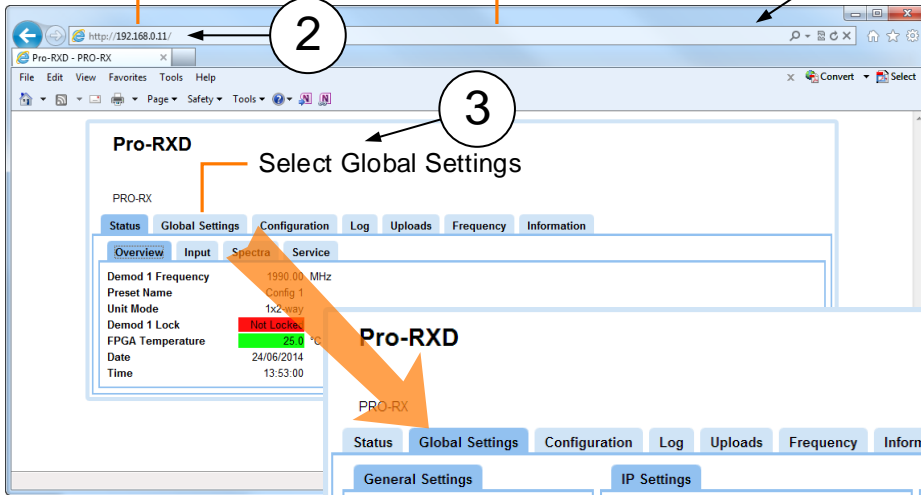

Select Global Settings


Pro-RXD

Pro-RXD

- Manual
- UHF
- DCB-100150
- DCB-150200
- DCB-200250
- DCB-250300
- DCB-300350
- DCB-340370
- DCB-450500
- DCB-550600
- DCB-810860
- DCBGS-100150
- DCBGS-167203
- DCBGS-203255
- DCBGS-310360
- DCBGS-440500
- DCBGS-550600
- DCBGS-640700
- DCBGS-700750
- DCEBGS-198270
- DC-100140
- DC-225265


Select the downconverter type you are using. The number is found on the label of the downconverter

Choose your Modulation Type

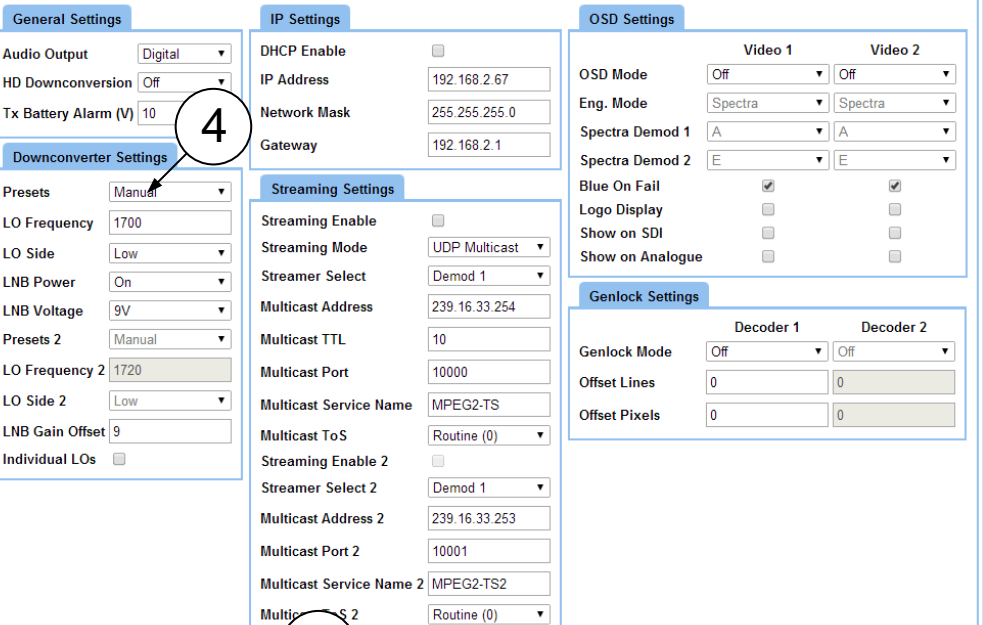

Select Configuration

Type Frequency of TX

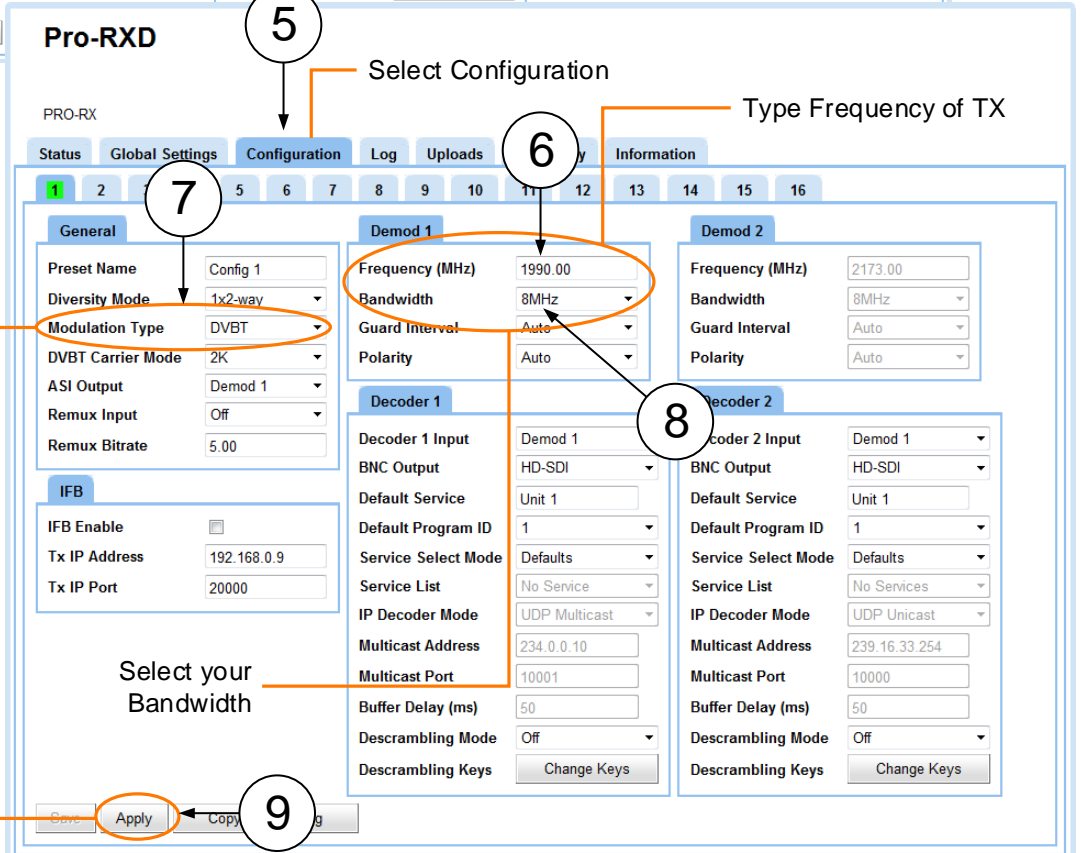

Select your Bandwidth

Click Apply, then OK on the message box

