



PRORXD-2RU Quick Start Guide

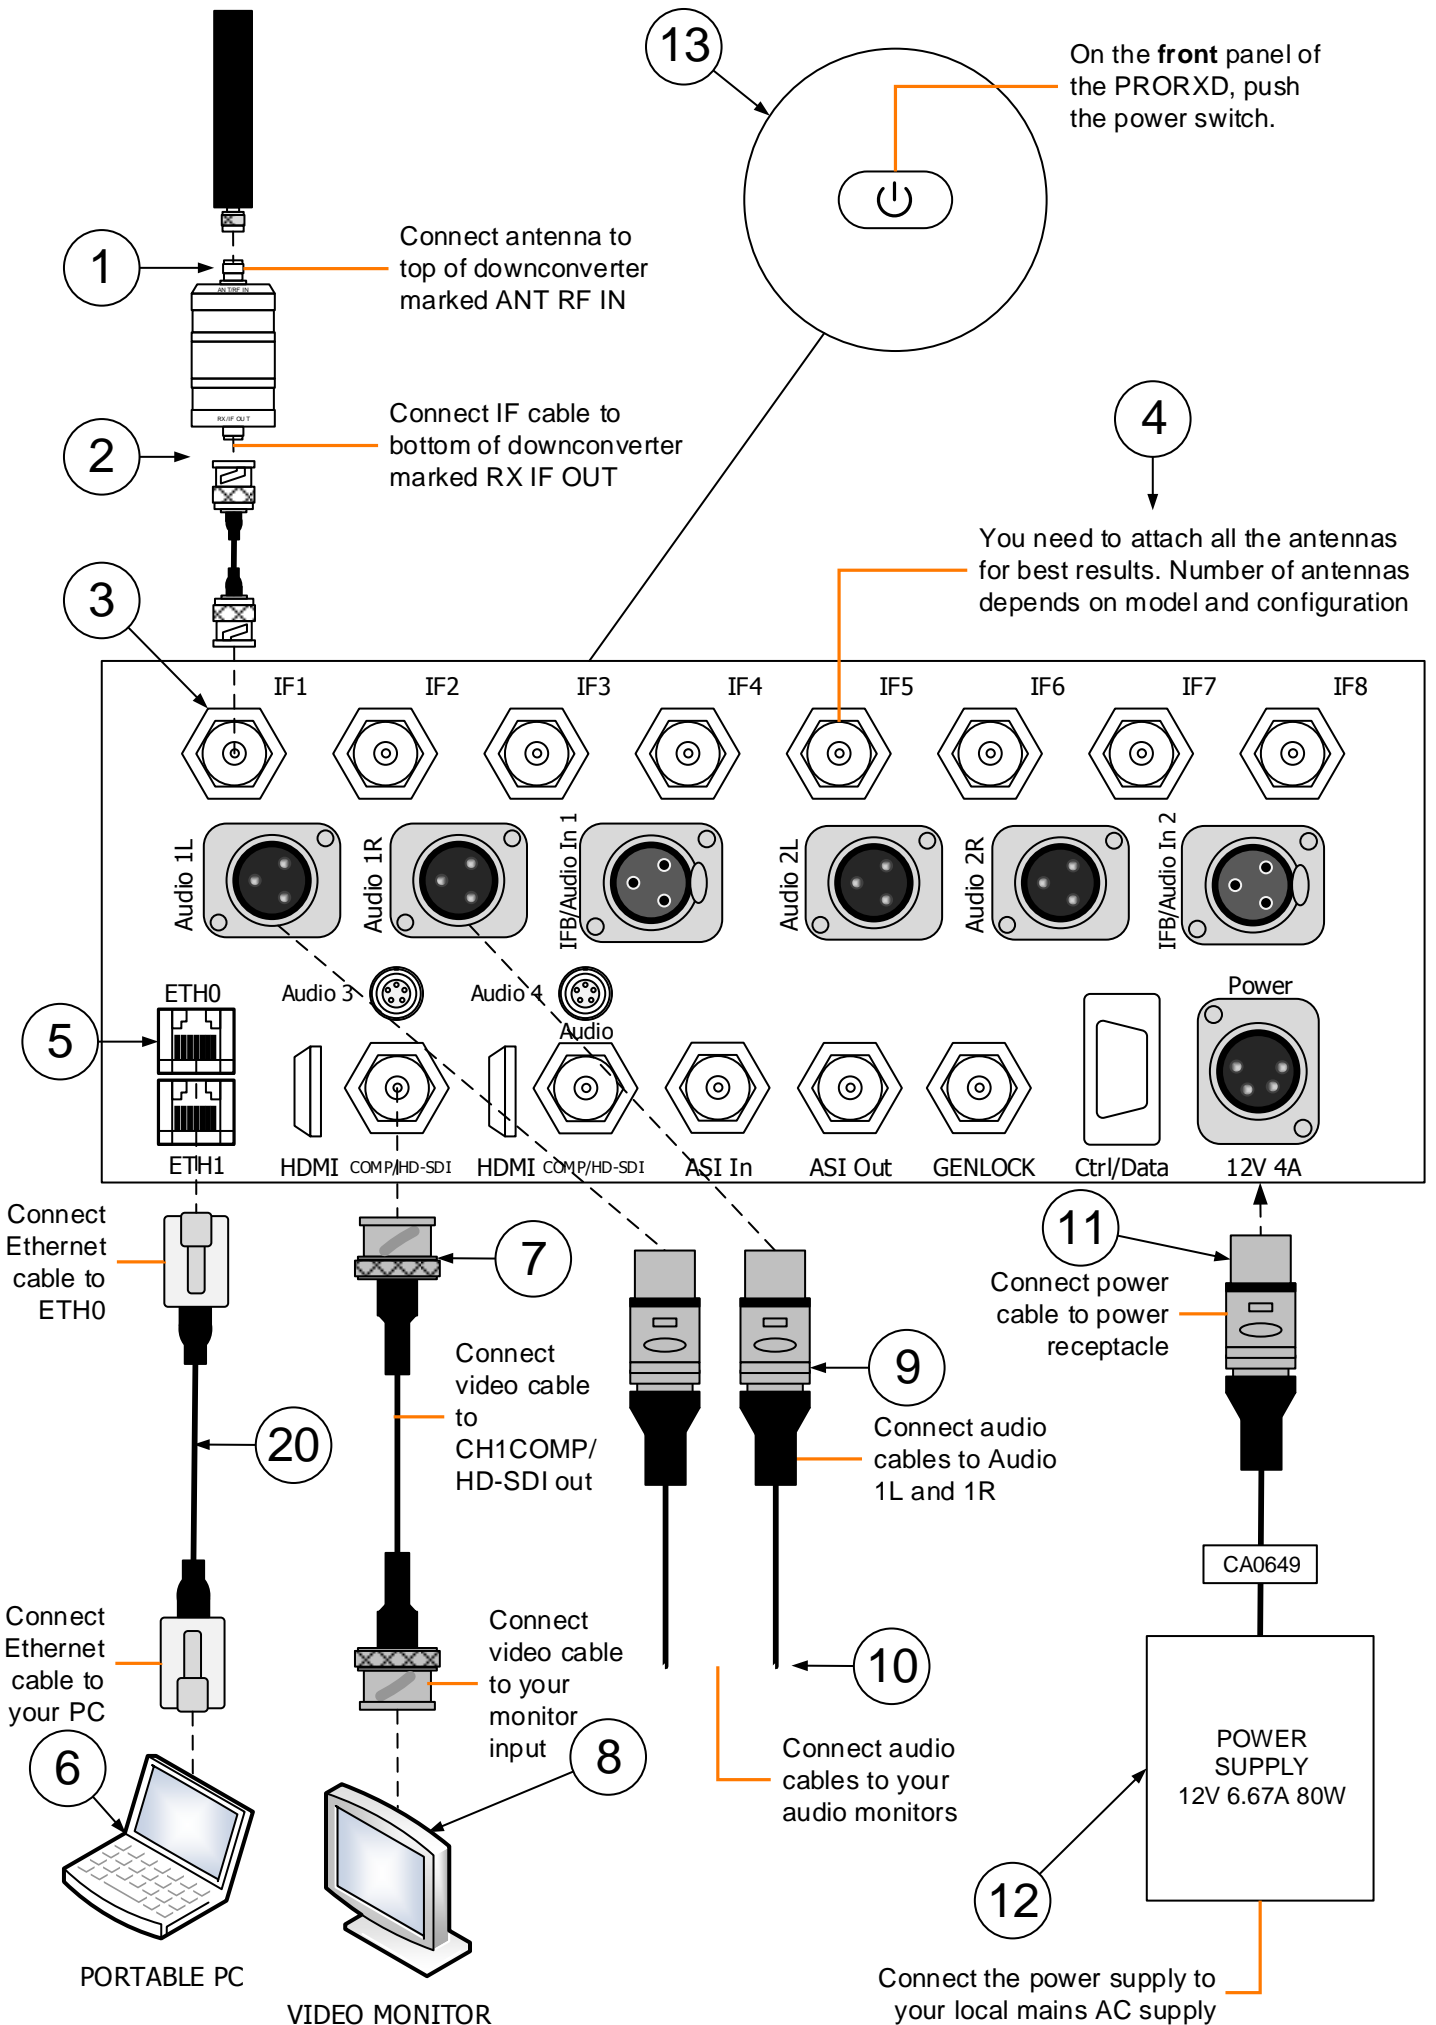

Type IP address for your PRORXD*

On your PC, open your web browser

* Power on the PRORXD, rotate the Joystick to the left through eight pages until you see the IP address, subnet mask and Gateway address.

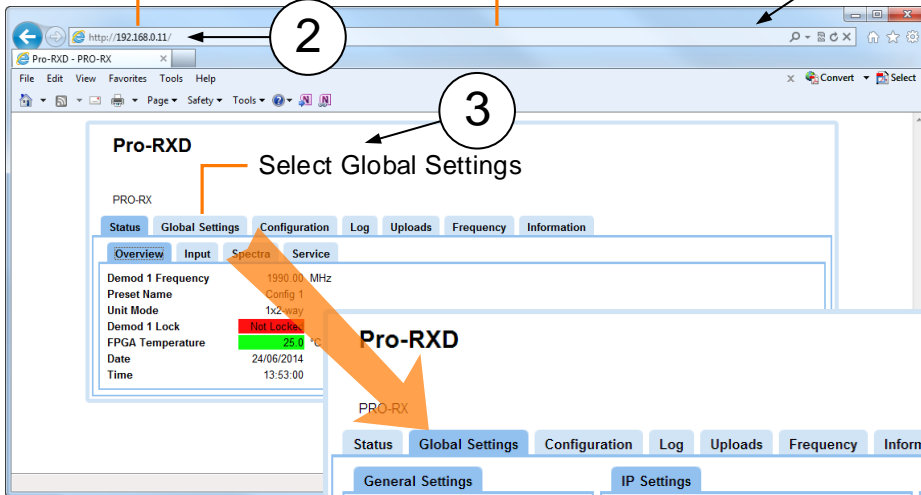

2


1

3

Select Global Settings

- Manual
- UHF
- DCB-100150
- DCB-150200
- DCB-200250**
- DCB-250300
- DCB-300350
- DCB-340370
- DCB-450500
- DCB-550600
- DCB-810860
- DCBGS-100150
- DCBGS-167203
- DCBGS-203255
- DCBGS-310360
- DCBGS-440500
- DCBGS-550600
- DCBGS-640700
- DCBGS-700750
- DCEBGS-198270
- DC-100140
- DC-225265


Select the downconverter type you are using. The number is found on the label of the downconverter

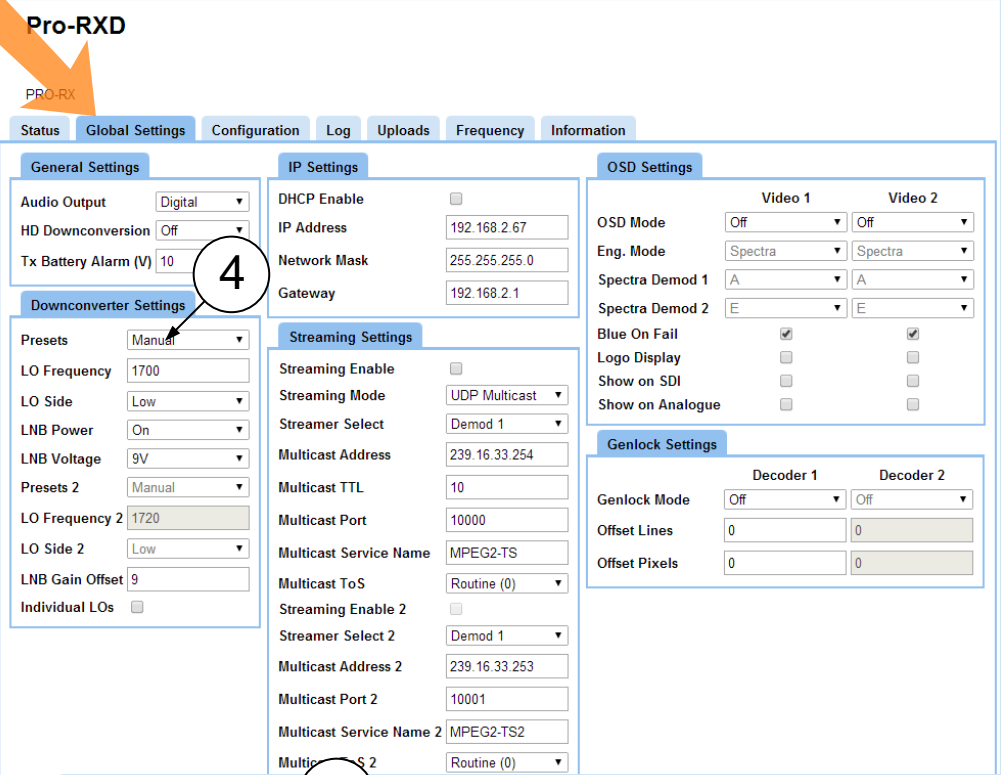

4

5

Select Configuration

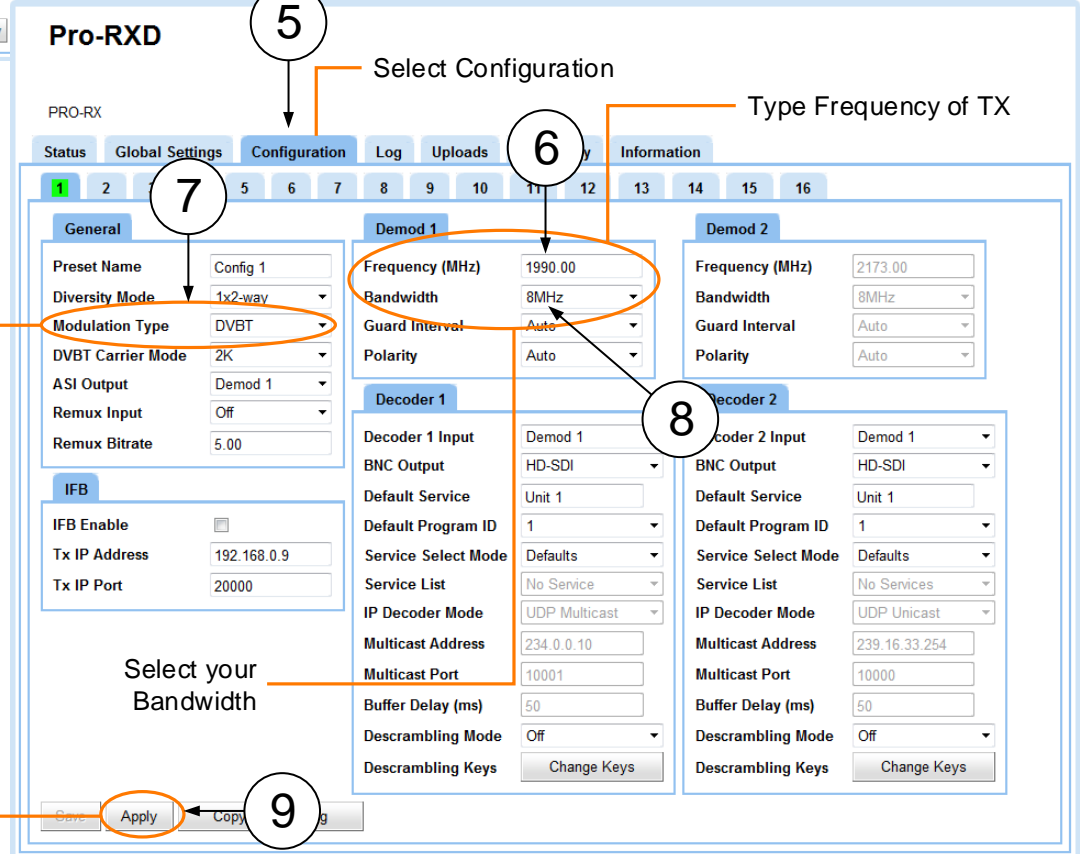

7


6

Type Frequency of TX

Choose your Modulation Type

8

Select your Bandwidth

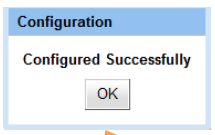

Click Apply, then OK on the message box

9